

BLACK LIGHT – SETUP INSTRUCTIONS

**Keep all packaging materials after opening. Black light must be returned in same box / packaging.*

1. PLUG IT IN

Use power cord provided to plug black light into an outlet.

2. SET ON TABLE

Set the black light on a table and point it at the area you want to glow. Use the knobs to aim the light: Twist knobs to the left to loosen, adjust the bracket legs as desired, then twist knobs to the right to lock in place.

3. YOU'RE DONE!

See reverse for more programming and setup options.



RENTAL RETURN INSTRUCTIONS

1. Put the black light back in the same shipping box, with the glass / bulb facing down. There is a Styrofoam piece in the bottom of the box that will hold the black light in place.
2. Fill box with bubble wrap so that the light is padded on all sides.
3. Seal package with tape. (Tape available at FedEx). **Remove the previous FedEx shipping label from the outside of the box and discard.** Cross out anything that was written on the outside of the box (apartment number, etc.).
4. Affix the pre-paid FedEx shipping label provided to the top of the box. Drop off at any FedEx.

RETURN DATE: Rentals are due back at any FedEx location two days after your event date. If your return date falls on a Sunday or holiday, you can return the following day.

MISPLACED RETURN SHIPPING LABEL: To re-print your shipping labels, locate your shipping confirmation email from orders@rentmywedding.com. Otherwise, contact us at 1-800-465-8020.

PROGRAMMING OPTIONS

ADJUST BRIGHTNESS

1. Press "MODE" button repeatedly until you see **2554** on the display.
2. Press "UP" or "DOWN" buttons to make light brighter or dimmer.

NOTE: Black light arrives pre-programmed to brightest setting.

STROBE MODE

1. Press "MODE" until **0005** is displayed.
2. Press "UP" to strobe faster. (*0265 is fastest*)
3. To turn OFF strobe mode, set to **0005**.



PULSE TO MUSIC

1. Press "MODE" until **0027** is displayed.
2. Press "UP" button until display shows **0017**.
3. Place black light close to a speaker so that it picks up vibration from bass beats.
4. To turn OFF sound active mode, set to **0027**.

RESET LIGHT TO STANDARD SETTINGS

1. Press & hold any button until menu screen lights up.
2. Press "MODE" repeatedly to scroll through numbers.
3. Confirm that the numbers on light match the numbers for Standard Settings (*see box at right*).
 - a. If you see any incorrect number, press "UP" or "DOWN" button to set it to correct number.
4. **IMPORTANT: Leave black light on 2554 when finished.**
 - a. Once you have set all numbers to match the 9 numbers shown at right, press "MODE" until "2554" shows on screen. You can then use black light or power off until event starts.

Standard Settings

All 9 numbers must appear on black light in this order:

- 2554 – Brightness Setting
- 0005 – Strobe Setting
- 0016
- 0027 – Sound Active Setting
- 0028
- 0020
- 4931
- 4932
- 4933

NOTE: UNPLUGGING THE BLACKLIGHT

Slide the silver switch up (away from the light), and twist plug counter clockwise (left) to disconnect. Connect plug to the BLUE socket on the black light. Turn the plug clockwise (to the right) to lock it in place.

