

PREMIUM FLOOR / DARK SURFACE GOBO PROJECTOR - SETUP INSTRUCTIONS

****Retain Packing Materials - Projector must be returned in plastic case****

SETUP GOBO PROJECTOR

1. Plug projector into outlet using power cord provided. It is pre-loaded with your design/color.
2. Place projector on table or tripod (*optional add-on*).
3. Aim projector where you want to display image. Use bracket to adjust angle.
4. Focus Image:
 - a. Locate the 2 knobs near top / front of projector.
 - b. Twist to the left to loosen slightly (*just enough so knobs slide – do not unscrew them all the way or loosen to much*)
 - c. Slide knobs until the image is clear.
 - d. Twist knobs to right to lock into place. (Do not over tighten!)




IMAGE SIZE

The farther away the projector is from the wall / floor, the larger the image will be.

ALIGN / ROTATE IMAGE

1. Point remote control towards the front of projector (glass lens)
 2. Press "AUTO" for rotation mode.
 3. Press "PLUS" (+) to begin rotating.
 - a. If image is spinning **clockwise**, press "**MINUS**" (-) to lock image in place
 - b. If image is spinning **counter-clockwise**, press "**PLUS**" (+) to lock image in place
- NOTE: Image will keep the same alignment if you power it off and turn back on again later.*

Press "BLACK OUT" to turn gobo off/on.

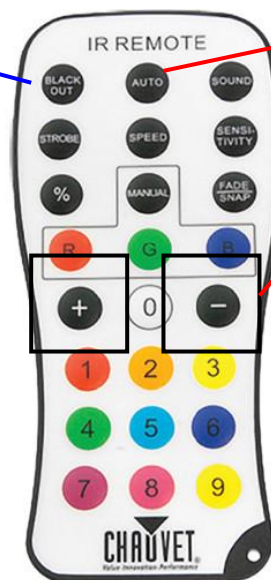

Press "AUTO" for rotation mode.
Then press "+" to rotate image.
Press "--" to stop image.

....Continued on Reverse Side

SPECIAL PROGRAMMING & TROUBLESHOOTING

1. Troubleshooting: Image Not Visible or Not Projecting

- a. **Power On:**
 - i. Point remote control at front of projector. Press “Black Out.” This will power on the projector, and you should now see the image. *If not, continue with next steps.*
- b. **Reset Projector to Remote Mode:**
 - i. Press “Menu” button on back of projector until “Ser” appears on the display. Press “ENTER” Hit the “UP” button until “On” appears.
 - ii. *If your image does not appear, press the “Black Out” button.*
 - iii. *If still not appearing, continue with next steps.*

2. Troubleshooting: Remote Control Not Working

- a. **Align Image:** If remote control is not responding, use buttons on back of projector to rotate image.
 - i. STEP 1: Press “MENU” until the word “GOBO” appears on display screen. Then press “ENTER” and “Stop” will appear on display.
 - ii. STEP 2: Press “UP” until you see “L-SP” appear on the display.
 - iii. STEP 3: When image is in the correct position press “DOWN” until you see “STOP” appear on the display. Then press “ENTER”, this will lock your image into place.
- b. **NOTE:** *If instead of “L-SP” you see “L” with a number, press “ENTER” until you do see “L-SP.” Then press “ENTER” when you see “STOP” appear on the display.*

3. Special Programming: Adjust Brightness

NOTE: We pre-program projectors for optimal brightness and run time. You should not change the brightness setting unless you have special brightness requirements and have read and understood the technical details below.

- a. Press “MANUAL” button on the remote.
- b. Press plus (“+”) to increase brightness, or minus (“-”) to decrease brightness.
 - i. Brightest Setting 255: 7 Hours of Run Time
 - ii. Average Setting 200: 10 Hours of Run Time
 - iii. Dim Setting 170: 15+ Hours Run Time

NOTE: Image will not display properly after run time is exceeded

4. Special Programming: Turn Image On / Off:

- a. Point remote control towards glass lens.
- b. Press the “Black Out” button to turn the image on or off.

5. Special Programming: Adjust Speed of Rotate / Spin Mode

- a. STEP 1: Press “MENU” until the word “GOBO” appears on display screen. Then press “ENTER” and “Stop” will appear on display.
- b. STEP 2: Press “UP” until you see “L-SP” appear on the display. Then press “ENTER”.
- c. STEP 3: You should now see the letter “L” with a number. Press UP to increase the number (speed), or DOWN to decrease the number (speed). (255 = fastest / 0 = slowest)
 - i. *If you do not see L with a number right away, press ENTER until you do.*
- d. STEP 4: When the image is spinning at your desired speed, Press “ENTER”.

RETURN INSTRUCTIONS

1. Put gobo back in plastic case. Secure with zip ties (provided inside case). Prep for shipping:
 - a. If you ordered only a projector (*OR if there is a shipping label on plastic case*):
 - i. Remove prior shipping label. Affix pre-paid return shipping label.
 - b. If you rented other items (*no shipping label on plastic case*):
 - i. Put plastic case inside cardboard box with other items

