

GOBO 3.0 – SETUP INSTRUCTIONS

****Keep all packaging after opening. Must be returned in same case.****

PLEASE HANDLE WITH CARE – PROJECTORS ARE FRAGILE!

STEP 1: SETUP GOBO PROJECTOR

1. Plug projector into outlet using power cord provided. It is pre-loaded with your design/color.
2. Place gobo projector on a table and point it where you want to display the projection image. Use the bracket to adjust the angle.


STEP 2: ADJUST IMAGE SIZE

The size of the projection image depends on how far away you place the projector from the wall. The farther away, the larger the image will be. For example, if the projector is 20 feet away from the wall, the image will be about 5 feet wide. At 10 feet away from the wall, the image will be 3 feet wide.



STEP 3: ADJUST FOCUS

1. Locate the two knobs on top of projector. Twist to the left to loosen them slightly. (Loosen just enough so that the knobs can slide – do not loosen too much). Adjust focus by sliding the knobs. When projection image is clear, twist knobs to the right to lock into place. (Do not over tighten!).

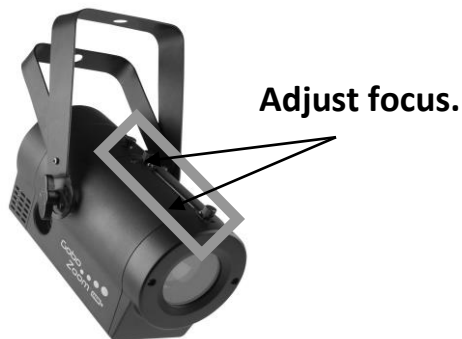


STEP 4: ALIGN THE IMAGE (OPTIONAL)

If you need to align or rotate your image, locate the remote control provided. Point remote at the front of the gobo projector (glass lens). Press the "AUTO" button, and then press "+" or "-" to rotate the image right or left. When your image is lined up how you would like, press the "+" or "-" button again to lock it in place.

Press "BLACK OUT" to turn gobo off/on.

Press "AUTO" for rotation mode.
Then press "+" or "--" to rotate image right/left.
Press "+" or "--" again to stop.

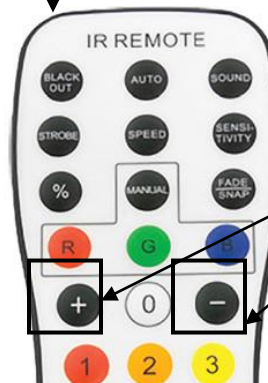

YOU'RE DONE!

ADVANCED SETUP OPTIONS

DANCE FLOOR / DARK SURFACE

If you are projecting onto a dance floor (or dark surface), you can set the projector to a brighter setting for maximum effect. To do this, press "**MANUAL**" button on the remote, and then press "+" button until you reach the desired brightness level. If you need to decrease brightness, press "-".

NOTE: Do not adjust the brightness if you are projecting onto a light colored surface. Your projector has been pre-programmed to the recommended brightness level for a white or light colored surface. Only increase the brightness if you are projecting onto a dark surface and unable to see the projection image at the standard brightness level.

CONTINUOUSLY ROTATING MODE

You can also set your image to rotate continuously at different speeds. Follow Step 3 to put your projector into rotating mode. To adjust the speed of rotation, press "**SPEED**" button on remote. Then press "+" or "--" button to change rotation speed. (Fastest: 255 / Slowest: 0).

NO REMOTE CONTROL?

If you misplaced the remote, you can also adjust the image settings using the menu button on the projector.

Rotate Image Using Back Panel Menu (No Remote):

1. Hit "**MENU**" until "**GOBO**" appears
2. Hit "**ENTER**" and the word "**STOP**" will appear across the screen.
3. Hit the "**UP**" or "**DOWN**" button to get the gobo rotating.
4. Hit the "**UP**" or "**DOWN**" button again to stop the rotation.
5. Press enter once STOP appears in order to lock the image into place.

Adjust Brightness Using Back Panel Menu (No Remote):

1. Hit "**MENU**" button until "**U**" appears, press "**ENTER**"
2. These numbers can be adjusted by clicking either the "**UP**" or "**DOWN**" button. Once the desired brightness is achieved press "**ENTER**" to lock this number into place

RETURN INSTRUCTIONS

1. Put gobo back in the plastic case. Remove any original shipping labels, and affix pre-paid return label provided. Lock the case using the 2 cable ties provided (see picture at right).
2. Drop off package at any FedEx location. (Package CANNOT be left at a drop box, it must be a physical FedEx store). Get a receipt for your records.
3. **Misplaced your return labels?** No problem! Email info@rentmywedding.com or call 305-921-4099 and we'll email you the labels.

