

RENT MY WEDDING

UPLIGHTING – GENERAL SETUP INSTRUCTIONS

****Keep all packaging materials after opening.**
Uplights must be returned in same box / packaging.**

SELECT COLOR

1. Use the power cord provided to plug the uplight into a power outlet.
2. Press “MENU” repeatedly until “C” shows on the display.
3. Press “ENTER”
4. Use the “UP” or “DOWN” button to select the desired color. *NOTE: For more color options, see Advanced Instructions on reverse side.*

C1 = Red

C3 = Blue

C5 = Magenta

C7 = White

C2 = Green

C4: =Cyan

C6 = Yellow

5. Press “ENTER” to save the color.

SETUP LIGHTS

1. Place the uplight on the floor, close to a wall or other surface.
2. Tilt light towards wall until desired effect is achieved. Adjust legs by twisting knobs on each side.
3. Link uplights together. Power cords can plug into outlet OR another uplight. Link 40 lights per outlet.

RETURN INSTRUCTIONS

1. Put each uplight into plastic bubble wrap pouch provided. Then place lights in shipping box. Next, place the power cords in the box. Fill box with packing paper. The box should be entirely filled with packing material so that the contents of box do not shift at all when box is moved. This is important to ensure uplights are not damaged during transit. Seal package with tape. (Tape available at FedEx).
2. Remove the previous FedEx shipping label from the outside of the box and discard. Cross out anything that was written on the outside of the box (apartment number, etc.).
3. Affix the pre-paid FedEx shipping label provided to the top of the box.
4. Drop off the package at any FedEx office. Be sure to get a receipt to keep for your records. (NOTE: Package must be dropped off at a FedEx location; it cannot be put in a drop box).

RETURN DATE: Unless otherwise noted, rentals are due back at any FedEx location two days after your event date. If your return date falls on a Sunday or holiday, you can return the following day. If you need more time for return, please call 305-921-4099 to make arrangements.

MISPLACED RETURN SHIPPING LABEL: Email info@rentmywedding.com or call 305-921-4099 and we will email the return labels. FedEx can print the labels if needed.

RENT MY WEDDING

UPLIGHTING – ADVANCED SETUP INSTRUCTIONS

I. Program Custom Colors

Refer to our color chart at www.RentMyWedding.com/Instructions to identify the RGB values for your desired custom color.

1. Press “MENU” repeatedly until “U” shows on the display.
2. Press “ENTER”
3. Use the “UP” and “DOWN” buttons to select a color to change (red = r, g = green, b = blue).
4. Press “ENTER”
5. Use the “UP” or “DOWN” button to select the desired color value between 000-100. (Note: Selecting 000 will turn the color off).
6. Press “ENTER” to continue to the next color.
7. Repeat steps 3 – 6 until you create your desired color.
8. Press “ENTER” to save the color.

**Note: To use one of the 7 pre-set colors, refer to the Easy Setup Instructions.*

II. Program Special Modes

Sound Active Mode

1. Plug uplight into a power outlet.
2. Press the MENU button repeatedly until “P—” shows on the display. Press ENTER.
3. Press the UP or DOWN buttons until “P5” or “P6” shows on the display. Press ENTER.
***NOTE: Select P5 for uplight to cycle through 7 colors; select P6 for uplight to cycle through 3 colors.*
4. Turn on music and adjust the microphone sensitivity knob until the uplight starts reacting to beat of the music. (See uplight diagram at www.RentMyWedding.com/Instructions). **Note: uplight will only respond to low frequencies of music (bass and drums).*

Color Switching / Fading Modes

1. Plug in the uplight into a power outlet.
2. Press the MENU button repeatedly until “P—” shows on the display. Press ENTER.
3. Press the UP or DOWN buttons until P1, P2, P3, or P4 shows on the display. Press ENTER.
 - P1: Color Switching – 7 Colors
 - P2: Color Fading – 7 Colors
 - P3: Color Switching – 3 Colors
 - P4: Color Fading – 3 Colors
4. Press the MENU button repeatedly until “S—” shows on the display.
5. Use the UP or DOWN buttons to adjust the color changing speed. Press Enter.
 - S001: Slowest
 - S100: Fastest
8. You’re done!