

# WIRELESS UPLIGHTING SETUP INSTRUCTIONS

**\*\*Keep all packaging materials. Uplights must be returned in same box / packaging.\*\***

## CHARGE BATTERIES FOR 6 HOURS (BEFORE EVENT)

1. To charge all lights using a single outlet: Use a power cord provided to plug one uplight into a power outlet. Then use the other power cords to link all uplights together.
2. Lights are fully charged when indicator light on back turns green, OR when you see 4 red dashes on screen.

## PROGRAM COLORS USING REMOTE

1. Turn each light "ON" using the power switch on the back of the light.
2. Point remote control at front of uplight (side with light bulbs) to program colors.

*TIP: Set colors ahead of time; power lights off until event starts. Lights will retain color in memory.*


## SETUP LIGHTS

1. Place the uplight on floor, close to wall.
2. Loosen knobs, tilt light until it shines up wall, then re-tighten knobs. **You're Done!**

## OPTIONAL: PROGRAM COLORS WITHOUT REMOTE

You can also program colors without the remote, using buttons on the back of each light. To do this, first find the "rgb" code for your color from the chart on back of this page. Then follow these steps:

1. Press "MENU" repeatedly until "U" shows on the display. Press "ENTER"
2. You should see "r" with a number. Press "UP" or "DOWN" to set the "r" value for your color. Press "ENTER"
3. You should see "g" with a number. Press "UP" or "DOWN" to set your "g" number. Press "ENTER"
4. You should see "b" with a number. Press "UP" or "DOWN" to set your "b" value. Press ENTER. **You're Done!**

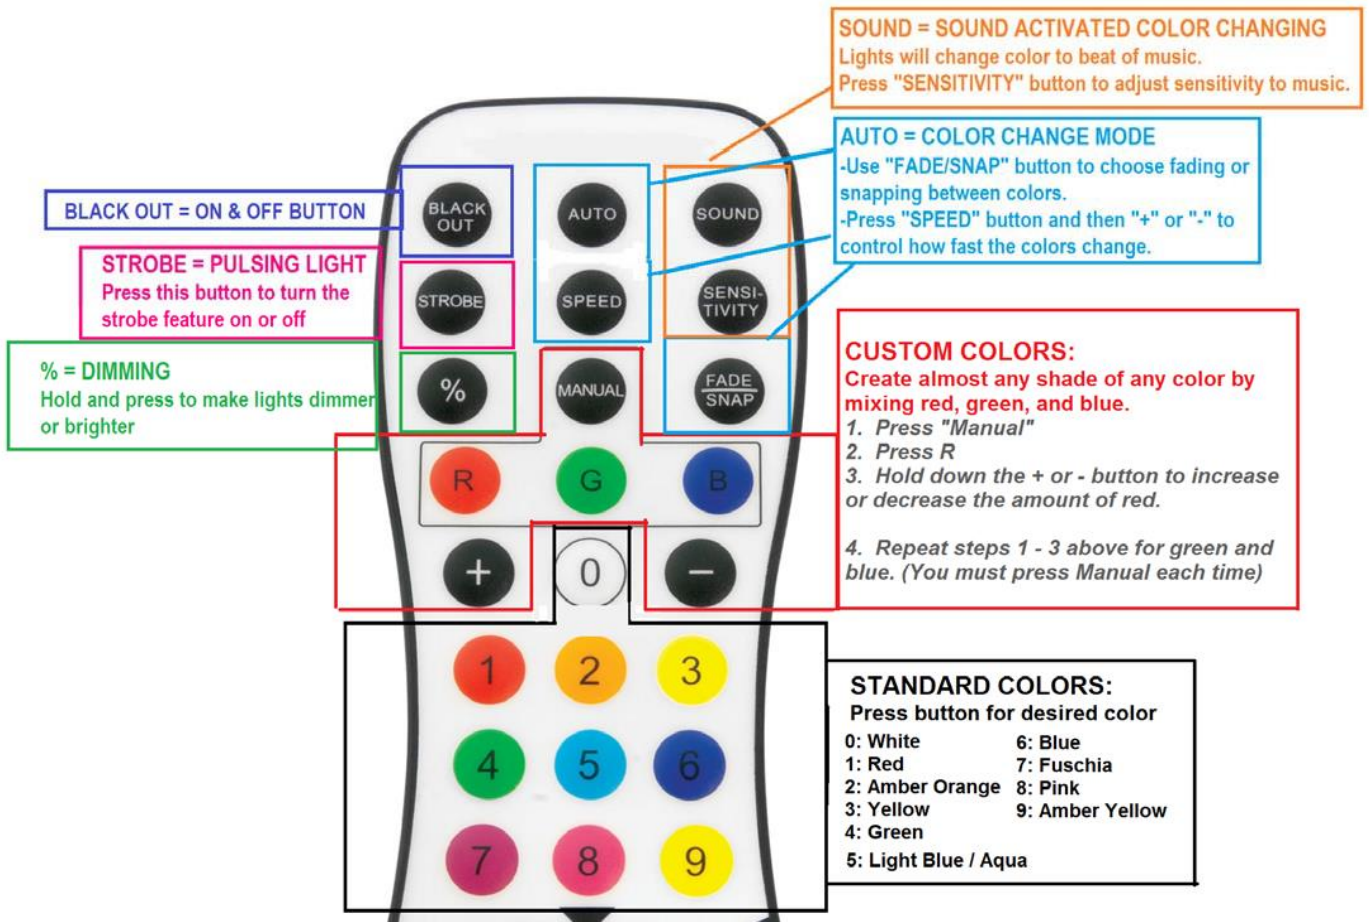

## CUSTOM COLOR CHART

Color Name	r, g, b Values
Red	100, 0, 0
Coral Pink	49,13,3
Coral Orange	52, 20, 3
Light Coral Pink	52, 17, 6
Salmon	57, 15, 5
Light Salmon	42,15,5
Orange	65,15,0
Light Orange	55,23,0
Amber Yellow	100,58,0
Amber Orange	100,50,0
Moccasin	100,50,6
Papaya Whip	100, 50, 7
Peach	100, 40, 5
Yellow	100, 80, 0
Gold	63,37,0
Neon Yellow	100, 62, 0
Light Yellow	100, 65, 2
Pale Light Yellow	100, 65, 4
Green	0, 100, 3
Lime Green	0, 100, 0
Green Yellow	50, 100, 0
Lawn Green	40,82,0
Chartreuse	68,100,0
Yellow Green	67,100,0
Spring Green	25, 100,13
Light Green	0, 100, 18
Pale Green	20, 100, 18
Emerald Green	0, 100, 18
Blue	0, 0, 100
Royal Blue	5, 0, 100
Dodger Blue	0, 60, 100
Sky Blue	0, 99, 100

Color Name	r, g, b Values
Light Blue	18, 82, 100
Powder Blue	5, 100, 100
Alice Blue	8, 48, 60
Aqua	0, 90, 75
Light Aqua	25, 100, 83
Turquoise Blue	0, 69, 53
Turquoise Green	0, 81, 53
Tiffany Blue	0, 99, 82
Aqua Marine	0, 100, 53
Purple	51, 0, 77 (Note: enter a "b" value of any number between 77-99 for different shades of purple)
Violet	21, 0, 100
Medium Purple	40, 0, 84
Medium Orchid	51, 0, 98
Plum	51, 15, 99
Orchid	65, 0, 99
Magenta/Fuchsia	65, 0, 65
Hot Pink	66,0,13
Pink	100, 6, 8
Petal Pink	55, 17, 13
Light Pink	57,13,13
Misty Rose	79, 55, 70
Sea Shell	63,34,21
Bisque	41,26,9
Blanched Almond	48,33,16
Corn Silk	48,33,19
Lavender Blush	91,74,99
Old Lace	69,50,40
White	100, 100, 100
Honeydew	8, 45, 17
Mint Cream	8, 48, 22
Ivory	100, 85, 21
Snow	82,73,70
White Smoke	50, 70, 88

### **RETURN INSTRUCTIONS**

Put each upright into plastic bubble wrap pouch provided. Then place lights in shipping box. Place the power cords on top. Then fill box with packing paper. Drop off at any FedEx location 2 days after event.