

# WATER EFFECT PROJECTOR – SETUP INSTRUCTIONS

**\*\*Keep all packaging materials. Projector must be returned in same case.\*\***

**PLEASE HANDLE WITH CARE – PROJECTORS ARE FRAGILE!**

## **BASIC SETUP:**

1. Plug it in using power cord provided.
2. Press and hold the "Master" button on the display for 4 seconds to activate the menu
3. Press "Master" button repeatedly until display shows "Manual Mode." Then press "Enter."
4. Press the Up or Down buttons until display shows "Color." Then press "Enter."
5. Press the Up or Down buttons to enter the number for your color:
  - WATER: 70
  - FIRE: 25
6. Then press Enter.
7. Place projector on a table and point at wall.
8. Twist lens to adjust desired level of focus.

***YOU'RE DONE!***



*Twist to  
adjust focus*

## **ADVANCED SETUP:**

*Choose between 12 different colors OR color-changing mode*

### **1. COLOR CHANGE MODE:**

- a. Press and hold the "Master" button on the display for 4 seconds then let go
- b. Press the "Master" button until display reads "Show Mode" then press "Enter"
- c. Use the up or down to switch between 3 different Shows then press "Enter"
- d. The light will rotate continuously through 6 different colors.

### **2. OTHER COLORS:**

- a. Follow steps 1-5 above and enter the color code from the chart below:

### **Color Chart**

0 - 10 White	11 - 21 White & Orange	22 - 32 Orange	33 - 43 Orange & Green
44 - 54 Green	55 - 65 Green & Blue	66 - 76 Blue	77 - 87 Blue & Yellow
88 - 98 Yellow	99 - 109 Yellow & Purple	110 - 120 Purple	121 - 127 Purple & White

## **MOUNTING OPTIONS:**

*For easy setup, place the projector on a table. Alternatively, you can also mount the projector on a lighting stand. To mount the projector, first attach the bracket (provided).*

### **BRACKET ATTACHMENT**

Attach bracket  
(provided) to the top  
of the projector.



Fasten the four screws  
(provided) to secure  
the bracket onto the  
projector.

Once bracket is  
attached, you can  
mount the projector  
to a lighting stand.

## **RETURN INSTRUCTIONS**

1. Put projector back in plastic shipping case.
2. Secure case with zip ties. Place a zip tie in the hole on each side of the case. Thread the end of the tie into the hole, and pull until it is tight. (See below).
3. Affix pre-paid return shipping label and drop off at any FedEx location.



**RETURN DATE:** Rentals are due back at any FedEx location two days after your event date. If your return date falls on a Sunday or holiday, you can return the following day. If you need more time for return, please call us to make arrangements at 305-921-4099.

**MISPLACED RETURN SHIPPING LABEL:** Email [info@rentmywedding.com](mailto:info@rentmywedding.com) or call 305-921-4099 and we will email you the labels. FedEx can print the labels for you if needed.